



SUZUKI

2-Stroke

Service Bulletin

Bulletin No: GENERAL-8

Date: May 1, 1975

Read and Initial

Manager _____

Parts _____


Service _____

Subject: ADJUSTING HORNS

PROBLEM: The horn won't operate.

- CAUSES:**
- A. On all units, the horn is battery-operated. Make sure the battery is fully charged.
 - B. Check the horn button by disconnecting the green wire at the horn and grounding it. The horn should honk. NOTE: Turn the main switch on.
 - C. The horn is out of adjustment.

CORRECTION: To adjust the horn, turn the small nut on the back or front with a 6 or 8mm wrench. Push the horn button while adjusting for greatest volume.

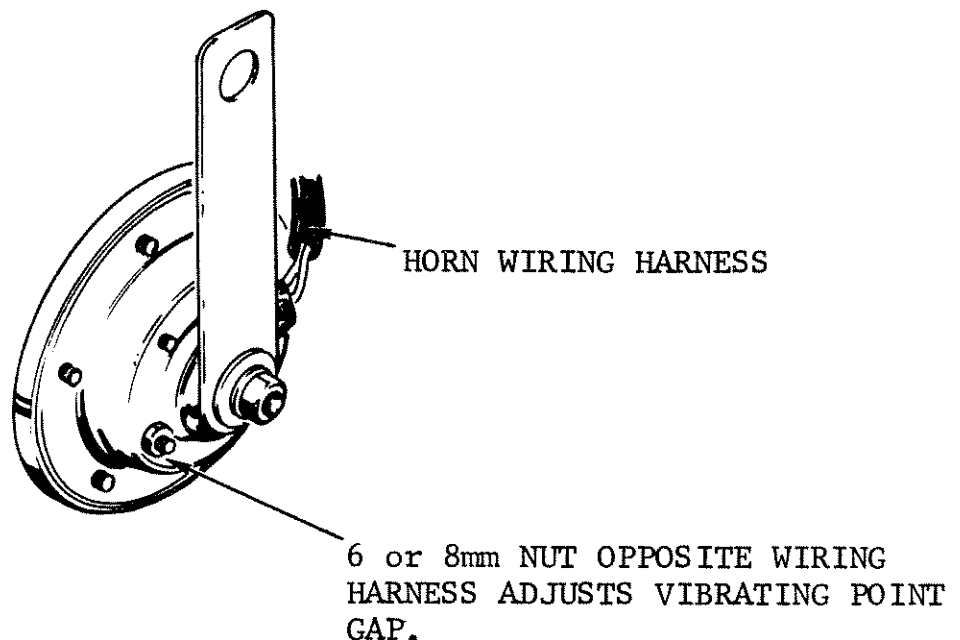

NOTE: Turn the nut clockwise to narrow the vibrating point gap.
Turn the nut counterclockwise to widen the vibrating point gap.