

(143)

Crankcase Assembly

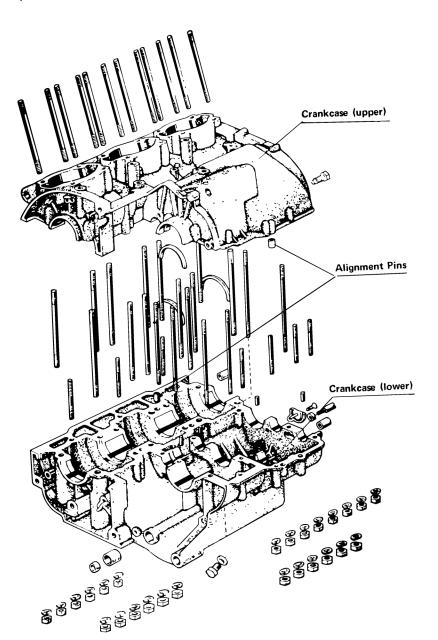

Loosen the kick stopper.

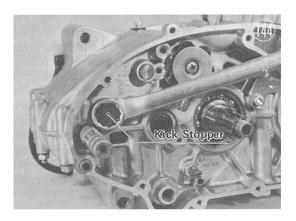

Turn the crankcase assembly upside down and remove the mounting nuts.

