

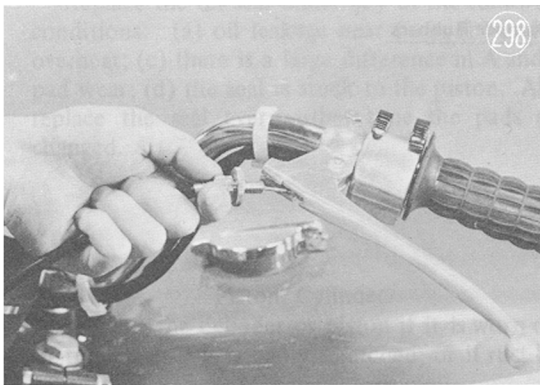


## 2) Disassembly


Loosen the clutch cable lock nut, and screw in the clutch cable adjusting bolt. This gives the cable sleeve enough play to enable removal of the cable from the clutch lever. To take off the cable, grab the cable outer sleeve with one hand and pull in the clutch lever with the other. While pulling on the cable, release the lever slowly, and pull the cable out of its slot.

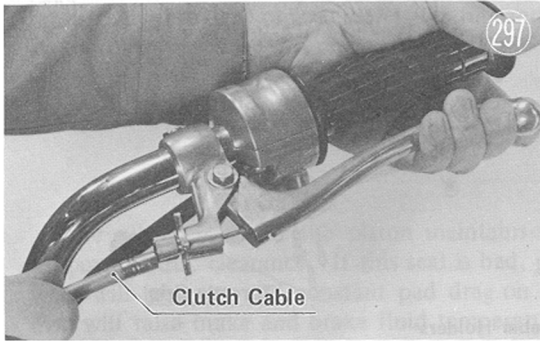

Loosen the front brake adjusting nut and pull the cable off the brake lever. (Expansion brake models)

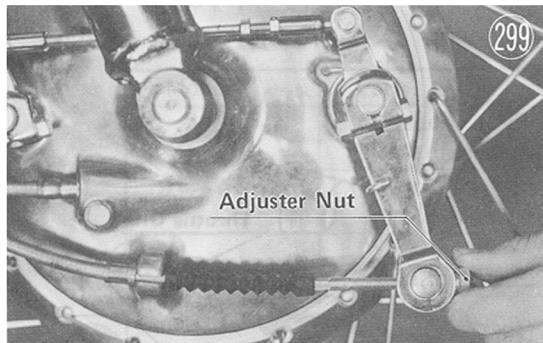


Remove the disc brake master cylinder assembly.

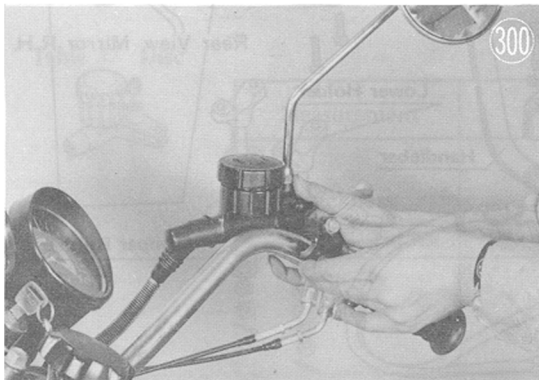


Loosen the handlebar mountings, remove the right upper mount, move the handlebar to the left for easy cable removal, and tighten the left mounting.



Screw in the throttle and starter cable adjusters completely to give the cables plenty of play.

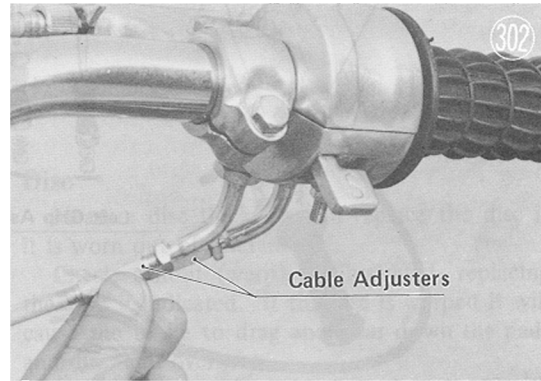

Take off the upper half of the right grip assembly.

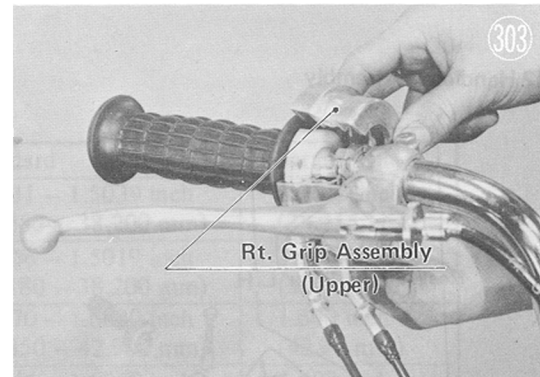

Pull the throttle grip off together with the bottom half.

